


OPERATION & CLEANING INSTRUCTIONS

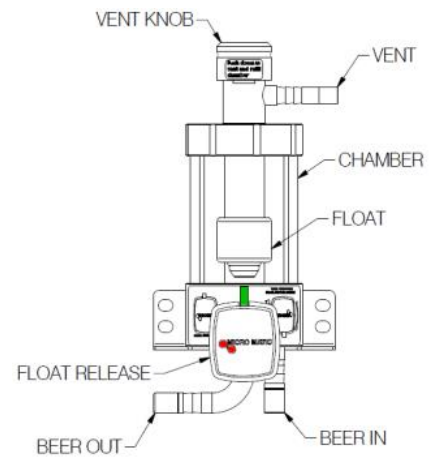


CHANGING THE KEG

Step 1

Disconnect empty keg and tap a fresh keg.


Step 2

Push down and hold **vent knob**, and allow the chamber to refill with clear beer. While venting, a small amount of beer and foam will escape through the vent line.

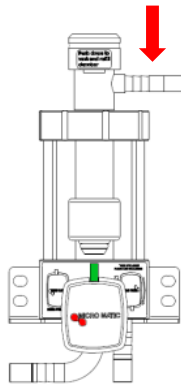


Step 3

Rotate **float release** 180 degrees until the red mark on the bottom of the base is seen completely thru the cut out on the float release. The float will rise to the top of the chamber and allow beer to flow to the faucet.

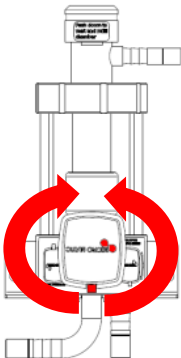

Step 4

Rotate **float release** 180 degrees until green mark on top of the base is seen completely thru the cut out on the float release.

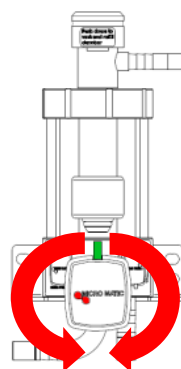


CLEANING INSTRUCTIONS

Step 1

Disconnect keg and connect line to cleaning system.


Step 2

Rotate **float release** 180 degrees until the red mark on the base is seen completely thru the cut out on the float release. This will allow the cleaning solution to circulate through the 7674 in either direction.

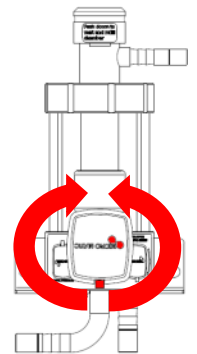

Step 3

Push down & hold **vent knob** to allow cleaning solution to fill chamber and exit through vent. This will clean the chamber, vent and drain.

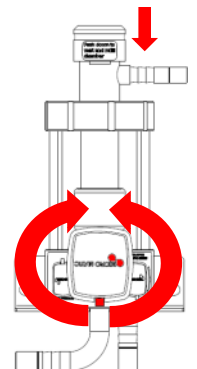

Step 4

Rinse with water. Repeat Step 3 while rinsing with water.

Step 5

Rotate **float release** 180 degrees until green mark on top of the base is seen completely thru the cut out on the float release. Follow instructions for resetting after a keg empties.

