



RESETTING SALES RESULTS:

Resetting daily sales:

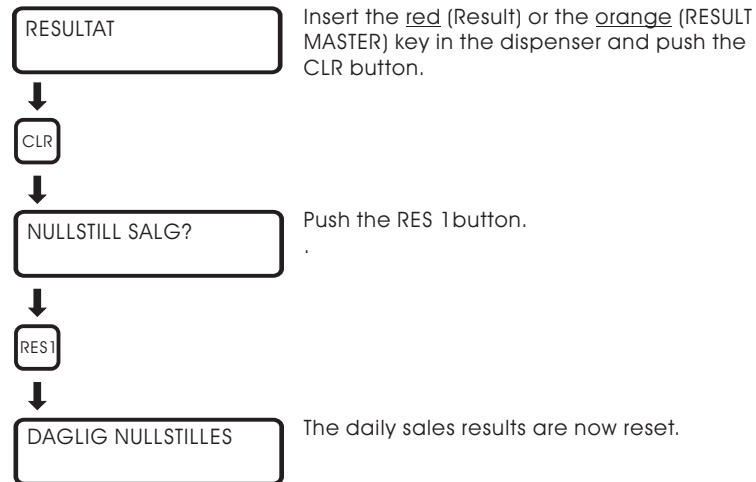

Resetting periodical sales:

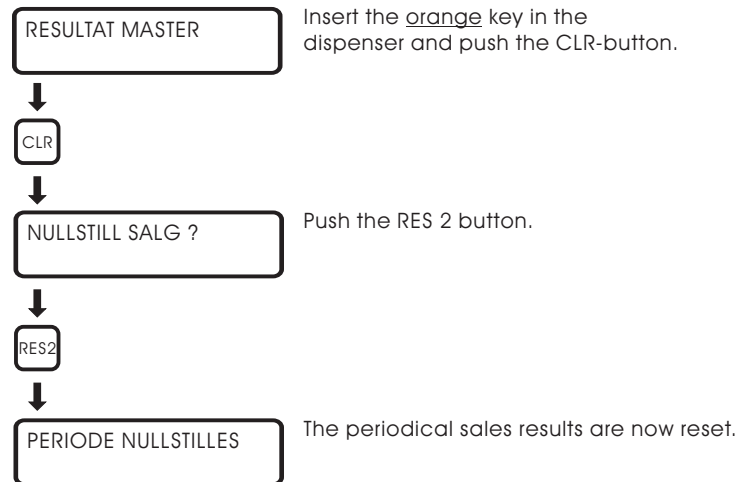


Manufacturer:

WWB DRINK SYSTEM AB
Smedsbyvägen 212
65610 KORSHOLM
FINLAND

Tfn. +358-6-3223 074

info@wwbdrinksystem.fi
www.wwbdrinksystem.fi

BCS-71/STANDARD USER'S MANUAL REV 3.6 N

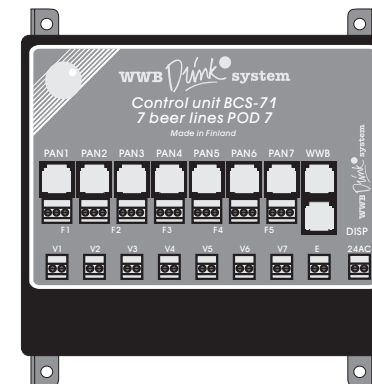

14032017

WWB
DRINK SYSTEM

CE

PORTIONING OF BEER:

Sales key (blue):

SETT INN NOKKEL

Insert the blue sales key in the keyhole on the dispenser's right hand side.



SALG

Choose product and measure by pushing the button

Waiter key (grey):

SETT INN NOKKEL
SERVITRISKONT.

Insert the grey waiter key in the keyhole on the dispenser's right hand side when the dispenser is programmed for waiter sales.

SALG
NR. 01

Choose product and measure by pushing the button.

FREE FLOW MEASURING:

SETT INN NOKKEL

Make sure that the tap is closed before inserting the blue sales key in the keyhole on the right hand side of the dispenser



SALG

Open the tap and pour the beer. Close the tap when the glass is full or the right measure is obtained.

SALES RESULTS:

Sales key (blue) and Waiter key (grey):

DAGLIG LITEN STOR
12 00001 00023

Insert the blue or the grey (only when programmed for waiter control) sales/waiter key in the dispenser. Push the ENT-button. The dispenser now shows the sales of large and small measures. The word Daily indicates from which line/lines the results are. The example display on the left indicates that line one and two are counted together. Browse through the results from the different lines by pushing the ENT-button.

DAGLIG MEDIUM
12 00001

Waiter key (grey): 1-10

NR 07 LITEN STOR
1 00005 00012

Insert the grey waiter key (1-10). Push the ENT-button for reading the daily sales result for the used waiter number. Push the MINUS-button to read the medium measure sales result..

Browse through the results from the different lines by pushing the ENT-button.

Results key red / orange:

DAGLIG LITEN STOR
1 00001 00023

Insert the results key in the dispenser. Push the RES 1 button. The display now shows the daily sales of small and large measures. The word Daily indicates from which line/lines the results are. The example display on the left indicates that line one and two are counted together. Browse through the results from the different lines by pushing the RES 1 button again.

DAGLIG MEDIUM
1 00001

Use the Minus button to show the sales of the Medium portions.

To read out the periodically sales use RES 2 button instead of the RES 1 button .

NR 07 LITEN STOR
1 00005 00012

Insert the results key in the dispenser. Push the PLUS -button to read the results from the different waiter waiters. Browse through the waiter numbers with the PLUS- button and press ENT when the requested waiter number is in the display.